

iPF5100

SERVICE MANUAL



PLE PAGE ONLY
VICE & REPAIR MANUALS

Canon

DU7-1234-000

AUGUST 2007
REV. 0

Contents

Chapter 1 PRODUCT DESCRIPTION

1	Product Overview	1
1.1.1	Product Overview	1
2	Features.....	1
1.2.1	Features.....	1
1.2.2	Printhead	1
1.2.3	Ink Tank	1
1.2.4	Cutter	1
1.2.5	Roll Feed Unit	1
1.2.6	Stand/Desktop Basket.....	1
1.2.7	IEEE1394 (FireWire) Board.....	1
1.2.8	Consumables.....	1
1.3	Product Specifications	1
1.3.1	Product Specifications	1
1.4	Detailed Specifications	1-
1.4.1	Print Speed and Direction	1-
1.4.2	Interface Specifications	1-
1.5	Names and Functions of Components	1-
1.5.1	Front	1-
1.5.2	Rear.....	1-
1.5.3	Top Cover (Inside)	1-23
1.5.4	Manual Loading Area	1-24
1.5.5	Roll Feed Unit Cover (Inside).....	1-25
1.5.6	Carriage	1-26
1.5.7	Inside.....	1-26
1.6	Basic Operation	1-27
1.6.1	Operation Panel	1-27
1.6.2	Main Menu.....	1-28
1.7	Safety and Precautions	1-50
1.7.1	Safety Precautions	1-50
1.7.1.1	Moving Parts	1-50
1.7.1.2	Adhesion of Ink	1-51
1.7.1.3	Electric Parts	1-53
1.7.2	Other Precautions	1-53
1.7.2.1	Printhead.....	1-53
1.7.2.2	Ink Tank	1-56

1.7.2.3 Handling the Printer 1-57

1.7.3 Precautions When Servicing Printer 1-60

1.7.3.1 Notes on the Data Stored in the Printer 1-60

1.7.3.2 Confirming the Firmware Version 1-60

1.7.3.3 Precautions against Static Electricity 1-60

1.7.3.4 Precautions for Disassembly/Reassembly 1-60

1.7.3.5 Self-diagnostic Feature 1-61

1.7.3.6 Disposing of the Lithium Battery 1-61

Chapter 2 TECHNICAL REFERENCE

Basic Operation Outline 2-1

1.1 Printer Diagram 2-1

1.2 Print Signal Sequence 2-2

1.3 Print Driving 2-3

Firmware 2-6

2.1 Operation Sequence at Power-on 2-6

2.2 Operation Sequence at Power-off 2-7

2.3 Print Control 2-8

2.4 Print Position Adjustment Function 2-14

2.5 Head Management 2-14

2.6 Printhead Overheating Protection Control 2-15

2.7 Pause between Pages 2-15

2.8 White Raster Skip 2-15

2.9 Sleep Mode 2-15

Printer Mechanical System 2-16

3.1 Outline 2-16

2.3.1.1 Outline 2-16

3.2 Ink Passage 2-17

2.3.2.1 Ink Passage 2-17

2.3.2.2 Ink Tank Unit 2-18

2.3.2.3 Carriage Unit 2-21

2.3.2.4 Printhead 2-26

2.3.2.5 Purge Unit 2-27

2.3.2.6 Maintenance Cartridge 2-34

2.3.2.7 Air Flow 2-35

2.3.3 Paper Path 2-36

2.3.3.1 Outline 2-36

2.3.3.2 Paper Path 2-36

2.3.3.3 Cutter Unit 2-54

2.4 Printer Electrical System 2-55

2.4.1 Outline 2-55

2.4.1.1 Overview 2-55

2.4.2 Main Controller 2-57

SAMPLE PAGE ONLY
SERVICE & REPAIR MANUALS





- 2.4.2.1 Main controller components..... 2-
- 2.4.3 Carriage Relay PCB2-59
 - 2.4.3.1 Carriage PCB components 2-59
- 2.4.4 Motor Driver2-60
 - 2.4.4.1 Roll feed unit PCB components 2-60
- 2.4.5 Maintenance Cartridge Relay PCB2-60
 - 2.4.5.1 Maintenance cartridge relay PCB components 2-60
- 2.4.6 Power Supply2-61
 - 2.4.6.1 Power supply block diagram..... 2-61
- 2.5 Detection Functions with Sensors 2-62
 - 2.5.1 Sensors for covers 2-62
 - 2.5.2 Ink passage system 2-63
 - 2.5.3 Carriage system 2-66
 - 2.5.4 Paper path system 2-68
 - 2.5.5 Others 2-72

Chapter 3 INSTALLATION

- 3.1 Installation 3-1
 - 3.1.1 Making Pre-Checks3-1
 - 3.1.1.1 Making Pre-Checks..... 3-1
 - 3.1.2 Unpacking and Installation3-1
 - 3.1.2.1 Unpacking and Installation..... 3-1
 - 3.1.2.2 Installing the Stand..... 3-10
 - 3.1.2.3 Installing the Desktop Basket 3-18
 - 3.1.3 Checking the Images/Operations3-21
 - 3.1.3.1 Checking the Images /Operations 3-21
- 3.2 Transporting the Printer 3-22
 - 3.2.1 Transporting the Printer3-22
 - 3.2.1.1 Transporting the Printer..... 3-22
 - 3.2.2 Reinstalling the Printer3-23
 - 3.2.2.1 Reinstalling the Printer 3-23

Chapter 4 DISASSEMBLY/REASSEMBLY

- 4.1 Service Parts..... 4-1
 - 4.1.1 Service Parts..... 4-1
- 4.2 Disassembly/Reassembly..... 4-2
 - 4.2.1 Disassembly/Reassembly..... 4-2
- 4.3 Points to Note on Disassembly and Reassembly 4-2
 - 4.3.1 Note on locations prohibited from disassembly 4-2
 - 4.3.2 Moving the carriage manually 4-2

4.3.3	Units requiring draining of ink.....	4-3
4.3.4	External Covers.....	4-4
4.3.5	Driving Unit.....	4-11
4.3.6	Cutter.....	4-11
4.3.7	Carriage Unit.....	4-13
4.3.8	Pick-Up/Feeder Unit.....	4-20
4.3.9	Roll Feed Unit.....	4-27
4.3.10	Purge Unit.....	4-29
4.3.11	Waste Ink Collection Unit.....	4-30
4.3.12	Ink Tank Unit.....	4-33
4.3.13	Head Management Sensor.....	4-36
4.3.14	Multi Sensor.....	4-37
4.3.15	PCBs.....	4-37
4.3.16	Opening the Cap/Moving the Wiper Unit.....	4-40
4.3.17	Opening/Closing the Ink Supply Valve.....	4-41
4.3.18	Draining the Ink.....	4-42
4.4	Applying the Grease.....	4-43
4.4.1	Applying the Grease.....	4-43
4.5	Adjustment and Setup Items.....	4-49
4.5.1	Adjustment Item List.....	4-49
4.5.2	Procedure after Replacing the Carriage Unit or Multi Sensor.....	4-49
4.5.3	Procedure after Replacing the Head Management Sensor.....	4-51

Chapter 5 MAINTENANCE

5.1	Periodic Replacement Parts.....	5-1
5.1.1	Periodic Replacement Parts.....	5-1
5.2	Consumable Parts.....	5-2
5.2.1	Consumable Parts.....	5-2
5.3	Periodic Maintenance.....	5-3
5.3.1	Periodic Maintenance.....	5-3

Chapter 6 TROUBLESHOOTING

6.1	Troubleshooting.....	6-1
6.1.1	Outline.....	6-1
6.1.1.1	Outline of Troubleshooting.....	6-1
6.2	Location of Connectors and Pin Arrangement.....	6-2
6.2.1	Main controller PCB.....	6-2
6.2.2	Carriage PCB.....	6-21
6.2.3	Power supply.....	6-34
6.2.4	Roll feed unit PCB.....	6-35

6.3 Version Up.....	6-
6.3.1 Firmware Update Tool.....	6-
6.4 Service Tools	6-
6.4.1 Tool List.....	6-

Chapter 7 SERVICE MODE

7.1 Service Mode.....	7
7.1.1 Service Mode Operation	7
7.1.2 Map of the Service Mode.....	7
7.1.3 Details of Service Mode	7-
7.1.4 Sample Printout.....	7-
7.2 Special Mode	7-
7.2.1 Special Modes for Servicing.....	7-

Chapter 8 ERROR CODE

8.1 Outline.....	8
8.1.1 Outline.....	8-1
8.2 Warning Table	8-2
8.2.1 Warnings	8-2
8.3 Error Table	8-3
8.3.1 Error Code List	8-3
8.4 Service Call Table	8-7
8.4.1 Service Call Errors.....	8-7

SAMPLE PAGE ONLY
SERVICE & REPAIR MANUALS



SAMPLE PAGE ONLY

SERVICE & REPAIR MANUALS

Chapter 1

PRODUCT DESCRIPTION

Contents

1 Product Overview	1-1
1.1.1 Product Overview	1-1
1.2 Features	1-3
1.2.1 Features	1-3
1.2.2 Printhead	1-3
1.2.3 Ink Tank	1-4
1.2.4 Cutter	1-4
1.2.5 Roll Feed Unit	1-4
1.2.6 Stand/Desktop Basket	1-6
1.2.7 IEEE1394 (FireWire) Board	1-7
1.2.8 Consumables	1-7
1.3 Product Specifications	1-9
1.3.1 Product Specifications	1-9
1.4 Detailed Specifications	1-13
1.4.1 Print Speed and Direction	1-13
1.4.2 Interface Specifications	1-19
1.5 Names and Functions of Components	1-20
1.5.1 Front	1-20
1.5.2 Rear	1-22
1.5.3 Top Cover (Inside)	1-23
1.5.4 Manual Loading Area	1-24
1.5.5 Roll Feed Unit Cover (Inside)	1-25
1.5.6 Carriage	1-26
1.5.7 Inside	1-26
1.6 Basic Operation	1-27
1.6.1 Operation Panel	1-27
1.6.2 Main Menu	1-28
1.7 Safety and Precautions	1-50
1.7.1 Safety Precautions	1-50
1.7.1.1 Moving Parts	1-50
1.7.1.2 Adhesion of Ink	1-51
1.7.1.3 Electric Parts	1-53
1.7.2 Other Precautions	1-53
1.7.2.1 Printhead	1-53
1.7.2.2 Ink Tank	1-56
1.7.2.3 Handling the Printer	1-57
1.7.3 Precautions When Servicing Printer	1-60

1.7.3.1 Notes on the Data Stored in the Printer	1-60
1.7.3.2 Confirming the Firmware Version.....	1-60
1.7.3.3 Precautions against Static Electricity.....	1-60
1.7.3.4 Precautions for Disassembly/Reassembly.....	1-60
1.7.3.5 Self-diagnostic Feature	1-61
1.7.3.6 Disposing of the Lithium Battery.....	1-61

PARTS CATALOG

**iPF5100/5000/
510/5**

SAMPLE PAGE ONLY
SERVICE & REPAIR MANUALS



Canon

DU7-3163-010

**AUGUST 2007
REV. 0**

PREFACE

This Parts Catalog contains listings of parts used

Diagrams are provided with the listings to aid the service technician in identifying clearly, the item to be orderd.

Whenever ordering parts, consult this Parts Catalog for all of the information pertaining to each item. Be sure to include, in the Parts Request, the full item description, the item part number, and the quantity.

COPYRIGHT (C) 1999 CANON INC.

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

Contents

NUMERICAL INDEX

iPF5100/5000/510/500(Numerical Index) 1-1

iPF5100/5000/510/500(Parts Catalog)

01	PRINTER & ACCESSORIES	2-1
02	COVERS (1)	2-4
03	COVERS (2)	2-8
04	ELECTRICAL PART	2-10
05	PURGE UNIT	2-14
06	CUTTER UNIT	2-16
07	INK SUPPLY UNIT	2-18
08	LINEAR SCALE & LIFT DRIVE UNIT	2-22
09	CARRIAGE UNIT	2-24
10	CARRIAGE & FEED MOTOR UNIT	2-28
11	PICK-UP & FEED UNIT (1)	2-30
12	PICK-UP & FEED UNIT (2)	2-34
13	PINCH ROLLER UNIT	2-36
14	AIR FLOW FAN UNIT	2-38
15	PLATEN & SPUR UNIT	2-40
16	CASSETTE	2-44
17	TOOL	2-46
R1	ROLL UNIT	2-48
R2	STAND & BASKET UNIT	2-52