

# iPF610

# SERVICE MANUAL



# Canon

## DU7-1243-000

OCTOBER 2007  
REV. 0

# Contents

## Chapter 1 PRODUCT DESCRIPTION

1.1 Product Overview .....	1
1.1.1 Product Overview .....	1
1.2 Features .....	1
1.2.1 Features .....	1
1.2.2 Printhead .....	1
1.2.3 Ink Tank .....	1-4
1.2.4 Cutter .....	1-4
1.2.5 Roll Feed Unit .....	1-4
1.2.6 Stand .....	1-6
1.2.7 IEEE1394 (FireWire) Board .....	1-7
1.2.8 Consumables .....	1-7
1.3 Product Specifications .....	1-9
1.3.1 Product Specifications .....	1-9
1.4 Detailed Specifications .....	1-13
1.4.1 Print Speed and Direction .....	1-13
1.4.2 Interface Specifications .....	1-20
1.5 Names and Functions of Components .....	1-22
1.5.1 Front .....	1-22
1.5.2 Rear .....	1-24
1.5.3 Top Cover (Inside) .....	1-25
1.5.4 Manual Loading Area .....	1-26
1.5.5 Roll Feed Unit Cover (Inside) .....	1-27
1.5.6 Carriage .....	1-28
1.5.7 Inside .....	1-29
1.6 Basic Operation .....	1-30
1.6.1 Operation Panel .....	1-30
1.6.2 Main Menu .....	1-31
1.7 Safety and Precautions .....	1-56
1.7.1 Safety Precautions .....	1-56
1.7.1.1 Moving Parts .....	1-56
1.7.1.2 Adhesion of Ink .....	1-57
1.7.1.3 Electric Parts .....	1-59
1.7.2 Other Precautions .....	1-59
1.7.2.1 Printhead .....	1-59
1.7.2.2 Ink Tank .....	1-61

SAMPLE PAGE ONLY




SERVICE & REPAIR MANUAL

**SAMPLE PAGE ONLY**



**SERVICE & REPAIR MANUALS**

1.7.2.3 Handling the Printer .....	1-63
<b>7.3 Precautions When Servicing Printer .....</b>	<b>1-66</b>
1.7.3.1 Notes on the Data Stored in the Printer .....	1-66
1.7.3.2 Confirming the Firmware Version .....	1-66
1.7.3.3 Precautions against Static Electricity .....	1-66
1.7.3.4 Precautions for Disassembly/Reassembly.....	1-66
1.7.3.5 Self-diagnostic Feature .....	1-67
1.7.3.6 Disposing of the Lithium Battery .....	1-67
<b>Chapter 2 TECHNICAL REFERENCE</b>	
<b>Basic Operation Outline .....</b>	<b>2-1</b>
1.1 Printer Diagram .....	2-1
1.2 Print Signal Sequence .....	2-2
1.3 Print Driving.....	2-3
 <b>Firmware .....</b>	<b>2-6</b>
2.2.1 Operation Sequence at Power-on .....	2-6
2.2.2 Operation Sequence at Power-off .....	2-7
2.2.3 Print Control .....	2-8
2.2.4 Print Position Adjustment Function .....	2-16
2.2.5 Head Management .....	2-16
2.2.6 Printhead Overheating Protection Control .....	2-16
2.2.7 Pause between Pages .....	2-17
2.2.8 White Raster Skip .....	2-17
2.2.9 Sleep Mode .....	2-17
<b>2.3 Printer Mechanical System.....</b>	<b>2-18</b>
2.3.1 Outline .....	2-18
2.3.1.1 Outline.....	2-18
2.3.2 Ink Passage .....	2-19
2.3.2.1 Ink Passage .....	2-19
2.3.2.2 Ink Tank Unit.....	2-20
2.3.2.3 Carriage Unit.....	2-23
2.3.2.4 Printhead .....	2-26
2.3.2.5 Purge Unit .....	2-28
2.3.2.6 Maintenance Cartridge.....	2-36
2.3.2.7 Air Flow.....	2-37
2.3.3 Paper Path .....	2-38
2.3.3.1 Outline.....	2-38
2.3.3.2 Paper Path .....	2-39
2.3.3.3 Cutter Unit .....	2-55
<b>2.4 Printer Electrical System.....</b>	<b>2-56</b>
2.4.1 Outline .....	2-56
2.4.1.1 Overview.....	2-56
2.4.2 Main Controller .....	2-58

2.4.2.1 Main controller components.....	2-58
2.4.3 Carriage Relay PCB .....	2-60
2.4.3.1 Carriage PCB components .....	2-60
2.4.4 Motor Driver .....	2-61
2.4.4.1 Roll feed unit PCB components .....	2-
2.4.5 Maintenance Cartridge Relay PCB .....	2-
2.4.5.1 Maintenance cartridge relay PCB components .....	2-
2.4.6 Power Supply .....	2-
2.4.6.1 Power supply block diagram.....	2-
2.5 Detection Functions with Sensors .....	2-
2.5.1 Sensors for covers .....	2-
2.5.2 Ink passage system .....	2-
2.5.3 Carriage system .....	2-
2.5.4 Paper path system .....	2-
2.5.5 Others .....	2-

### Chapter 3 INSTALLATION

3.1 Installation .....	3
3.1.1 Making Pre-Checks .....	3
3.1.1.1 Making Pre-Checks.....	3
3.1.2 Unpacking and Installation .....	3
3.1.2.1 Unpacking and Installation.....	3
3.1.2.2 Installing the Stand.....	3

### Chapter 4 DISASSEMBLY/REASSEMBLY

4.1 Service Parts.....	4-1
4.1.1 Service Parts.....	4-1
4.2 Disassembly/Reassembly.....	4-1
4.2.1 Disassembly/Reassembly.....	4-1
4.3 Points to Note on Disassembly and Reassembly .....	4-2
4.3.1 Note on locations prohibited from disassembly .....	4-2
4.3.2 Moving the carriage manually .....	4-2
4.3.3 Units requiring draining of ink.....	4-3
4.3.4 External Covers.....	4-3
4.3.5 Driving Unit.....	4-10
4.3.6 Cutter .....	4-11
4.3.7 Carriage Unit.....	4-13
4.3.8 Pick-Up/Feeder Unit .....	4-20
4.3.9 Roll Feed Unit.....	4-27
4.3.10 Purge Unit .....	4-29

 
**SAMPLE PAGE ONLY**  
**SERVICE & REPAIR MANUALS**



SAMPLE PAGE ONLY  
 SERVICE & REPAIR MANUALS

SAMPLE PAGE ONLY  
 SERVICE & REPAIR MANUALS



4.3.11 Waste Ink Collection Unit.....	4-30
4.3.12 Ink Tank Unit.....	4-33
4.3.13 Head Management Sensor.....	4-35
4.3.14 Multi Sensor .....	4-36
4.3.15 PCBs .....	4-36
4.3.16 Opening the Cap/Moving the Wiper Unit.....	4-39
4.3.17 Opening/Closing the Ink Supply Valve .....	4-40
4.3.18 Draining the Ink .....	4-41
Applying the Grease.....	4-42
4.1 Applying the Grease .....	4-42
Adjustment and Setup Items.....	4-48
5.1 Adjustment Item List .....	4-48
5.2 Procedure after Replacing the Carriage Unit or Multi Sensor.....	4-48
5.3 Procedure after Replacing the Head Management Sensor .....	4-50
Chapter 5 MAINTENANCE	
Periodic Replacement Parts.....	5-1
1.1 Periodic Replacement Parts.....	5-1
Consumable Parts .....	5-1
2.1 Consumable Parts.....	5-1
Periodic Maintenance.....	5-3
3.1 Periodic Maintenance .....	5-3
Chapter 6 TROUBLESHOOTING	
 Troubleshooting .....	6-1
6.1.1 Outline .....	6-1
6.1.1.1 Outline of Troubleshooting .....	6-1
6.2 Location of Connectors and Pin Arrangement .....	6-2
6.2.1 Main controller PCB.....	6-2
6.2.2 Carriage PCB.....	6-15
6.2.3 Power supply .....	6-22
6.2.4 Roll feed unit PCB.....	6-23
6.3 Version Up .....	6-25
6.3.1 Firmware Update Tool.....	6-25
6.4 Service Tools .....	6-26
6.4.1 Tool List .....	6-26
Chapter 7 SERVICE MODE	
7.1 Service Mode.....	7-1

7.1.1 Service Mode Operation .....	7-1
7.1.2 Map of the Service Mode .....	7-2
7.1.3 Details of Service Mode .....	7-12
7.1.4 Sample Printout .....	7-30
7.2 Special Mode .....	7-35
7.2.1 Special Modes for Servicing .....	7-35

## Chapter 8 ERROR CODE

8.1 Outline .....	8-1
8.1.1 Outline .....	8-1
8.2 Warning Table .....	8-2
8.2.1 Warnings .....	8-2
8.3 Error Table .....	8-3
8.3.1 Error Code List .....	8-3
8.4 Service Call Table .....	8-6
8.4.1 Service call errors .....	8-6

---

# Chapter 4 DISASSEMBLY/REASSEMBLY

---

# Contents

- 4.1 Service Parts..... 4-1
  - 4.1.1 Service Parts..... 4-1
- 4.2 Disassembly/Reassembly..... 4-1
  - 4.2.1 Disassembly/Reassembly..... 4-1
- 4.3 Points to Note on Disassembly and Reassembly ..... 4-2
  - 4.3.1 Note on locations prohibited from disassembly ..... 4-2
  - 4.3.2 Moving the carriage manually ..... 4-2
  - 4.3.3 Units requiring draining of ink..... 4-3
  - 4.3.4 External Covers ..... 4-3
  - 4.3.5 Driving Unit..... 4-10
  - 4.3.6 Cutter ..... 4-11
  - 4.3.7 Carriage Unit..... 4-13
  - 4.3.8 Pick-Up/Feeder Unit ..... 4-20
  - 4.3.9 Roll Feed Unit ..... 4-27
  - 4.3.10 Purge Unit ..... 4-29
  - 4.3.11 Waste Ink Collection Unit..... 4-30
  - 4.3.12 Ink Tank Unit..... 4-33
  - 4.3.13 Head Management Sensor..... 4-35
  - 4.3.14 Multi Sensor ..... 4-36
  - 4.3.15 PCBs ..... 4-36
  - 4.3.16 Opening the Cap/Moving the Wiper Unit..... 4-39
  - 4.3.17 Opening/Closing the Ink Supply Valve ..... 4-40
  - 4.3.18 Draining the Ink ..... 4-41
- 4.4 Applying the Grease ..... 4-42
  - 4.4.1 Applying the Grease ..... 4-42
- 4.5 Adjustment and Setup Items ..... 4-48
  - 4.5.1 Adjustment Item List ..... 4-48
  - 4.5.2 Procedure after Replacing the Carriage Unit or Multi Sensor ..... 4-48
  - 4.5.3 Procedure after Replacing the Head Management Sensor ..... 4-50



## 4.1 Service Parts

### 4.1.1 Service Parts

The service parts indicated below require careful handling.

**1. Keep all packages with the warning not to turn over.**

Pay careful attention to all individually packaged service part (carriage unit, purge unit, ink tank unit, and ( parts) boxes marked "This side up" and handle appropriately.



F-4-1

## .2 Disassembly/Reassembly

### .2.1 Disassembly/Reassembly

For the procedure for disassembly/reassembly of the components excluding the major components, refer to the parts catalog. Illustrations in the parts catalog are assigned illustration numbers according to the order in which parts are assembled.

---


## Points to Note on Disassembly and Reassembly

---

1 Note on locations prohibited from disassembly

---

Assemblies that are prohibited from disassembly and their adjustment outside the factory cannot be conducted. These assemblies are indicated by red screws. Do not loosen or remove the red screw, because normal operation and print can't be done if it is loosened or removed.

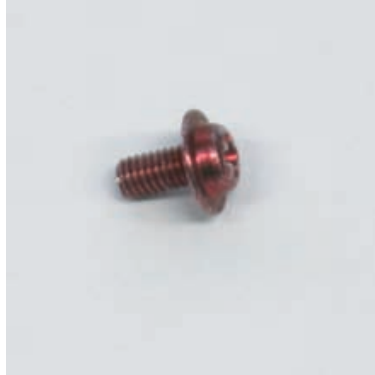

F-4-2

---

### 4.3.2 Moving the carriage manually

---



Move the carriage as required during disassembly/reassembly to prevent the carriage from contacting the parts to be removed.

The carriage does not move when capped. When uncapping moving the carriage, refer to the procedures in DISASSEMBLY/REASSEMBLY>Points to Note on Disassembly and Reassembly>Opening the Cap/Moving the Wiper Unit.

---

---

# Chapter 6 TROUBLESHOOTING

---

**SAMPLE PAGE ONLY**  
**SERVICE & REPAIR MANUALS**

---

---

# Contents

6.1 Troubleshooting.....	6-1
6.1.1 Outline .....	6-1
6.1.1.1 Outline of Troubleshooting.....	6-1
6.2 Location of Connectors and Pin Arrangement .....	6-2
6.2.1 Main controller PCB.....	6-2
6.2.2 Carriage PCB.....	6-15
6.2.3 Power supply .....	6-22
6.2.4 Roll feed unit PCB.....	6-23
6.3 Version Up.....	6-25
6.3.1 Firmware Update Tool.....	6-25
6.4 Service Tools .....	6-26
6.4.1 Tool List .....	6-26

## 6.1 Troubleshooting

### 6.1.1 Outline

#### 6.1.1.1 Outline of Troubleshooting

##### **Outline**

Problems subject to troubleshooting are classified into those shown on the display (warning, error, and service call) and those not shown on the display.


##### **Precautions for Troubleshooting**

- 1) Check the environmental conditions and the media used for printing.
- 2) Before performing troubleshooting, make sure that all connectors and cables are connected properly.
- 3) When servicing the printer with the external cover removed and the AC power supplied, be extremely careful to avoid electric shock and shorting electrical devices.
- 4) In the following sections, the troubleshooting steps are described such that the component related to the most probable cause of the problem will be repaired or replaced first, being followed by components with less problem probability. If multiple components have the same problem probability, the steps are described beginning with the easiest one.  
After performing each step, check to see if the problem has been resolved by making test prints. If the problem persists, proceed to the next step.
- 5) After completion of the troubleshooting, check that all connectors and cables have been reconnected and screws have been tightened firmly.
- 6) Whenever you have performed replacement or repair services, make test prints to check whether the problem has been resolved.



## Location of Connectors and Pin Arrangement

### 1 Main controller PCB

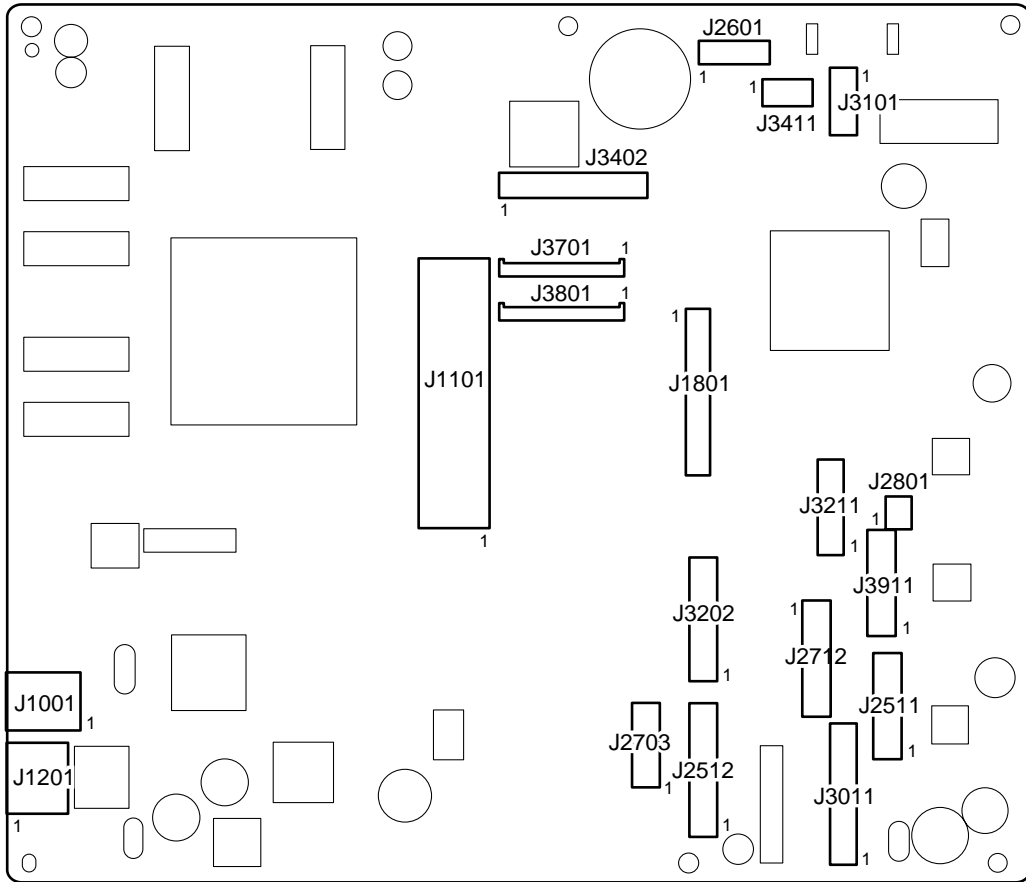

F-6-1

T-6-1

<b>J1001</b>			
<b>Pin Number</b>	<b>Signal name</b>	<b>IN/OUT</b>	<b>Function</b>
1	VBUS	IN	USB VBUS (+5V)
2	D-	IN/OUT	USB data (-)
3	D+	IN/OUT	USB data (+)
4	GND	-	USB GND
5	GND	-	GND (Connector shell)
6	GND	-	GND (Connector shell)

T-6-2

<b>J1001</b>			
<b>Pin Number</b>	<b>Signal name</b>	<b>IN/OUT</b>	<b>Function</b>
1	GND	-	GND

# iPF610/600

## PARTS CATALOG



SAMPLE PAGE ONLY  
SERVICE & REPAIR MANUALS

# Canon

## DU7-3164-010

OCTOBER 2007  
REV. 1

## PREFACE

This Parts Catalog contains listings of parts used

Diagrams are provided with the listings to aid the service technician in identifying clearly, the item to be ordered.

Whenever ordering parts, consult this Parts Catalog for all of the information pertaining to each item. Be sure to include, in the Parts Request, the full item description, the item part number, and the quantity.

***COPYRIGHT (C) 1999 CANON INC.***

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

**SAMPLE PAGE ONLY**  
**SERVICE & REPAIR MANUALS**





# Contents

## NUMERICAL INDEX

iPF610/600(Numerical Index) ..... 1-1

## iPF610/600(Parts Catalog)

01	PRINTER & ACCESSORIES .....	2-1
02	ROLL UNIT .....	2-4
03	COVERS (1) .....	2-8
04	COVERS (2) .....	2-12
05	ELECTRICAL PART .....	2-14
06	PURGE UNIT .....	2-18
07	CUTTER UNIT .....	2-20
08	INK SUPPLY UNIT .....	2-22
09	LINEAR SCALE & LIFT DRIVE UNIT .....	2-24
10	CARRIAGE UNIT .....	2-26
11	CARRIAGE & FEED MOTOR UNIT .....	2-28
12	PICK-UP & FEED UNIT (1) .....	2-30
13	PICK-UP & FEED UNIT (2) .....	2-34
14	PINCH ROLLER UNIT .....	2-36
15	AIR FLOW FAN UNIT .....	2-38
16	PLATEN & SPUR UNIT .....	2-40
17	CASSETTE .....	2-43
18	TOOL .....	2-45
R1	STAND UNIT .....	2-46

